




Quick start guide

TR1909

**Trimline® telephone
with caller ID/call waiting**

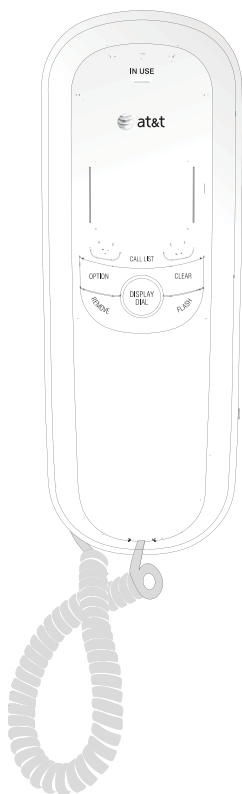

Handset layout

IN USE

Flashes quickly when there is an incoming call.
Flashes slowly when the telephone line cord is not plugged into a wall jack or another telephone at the same line is in use.

OPTION

Press to display the setting options.
While in the option menu, press to save the selection and move to the next feature.

REMOVE

While viewing the call log, press to delete entry currently displayed, press and hold to remove all entries.

CALL LIST ▼ / ▲

When the telephone is in idle mode, press to display caller ID information.

CLEAR

Press to exit dialing, to exit storing a number in memory, to exit the call log, or to return to the idle screen anytime without saving the changes.

DISPLAY DIAL

Press to dial the number currently displayed.

FLASH

When there is a call waiting signal, press **FLASH** to put the current call on hold and connect to the new call. Press **FLASH** again to return to the original call. Also, press **FLASH** to activate other telephone company subscriber services such as three-way calling.

M1, M2, M3

Press to dial a one-touch number from the memory.

Listening volume

Adjust the handset listening volume to **LO**, **MED**, or **HI**.

MEMORY

Press to access phone numbers stored in the memory.

MUTE

Press and hold **MUTE** to silence the microphone to prevent the other party from hearing you, but you will still be able to hear the other party. Release **MUTE** to return to the original two-way conversation.

Switch hook

When held, the telephone is in idle mode.
When released, the telephone is ready to make a call.

PAUSE/REDIAL

When the handset is lifted, press to redial the last number dialed. When storing a number in the memory or directory, press to insert a 3-second pause in the dialing sequence.



PROG

Press to store a phone number in the memory.

Screen display messages



Screen icons

| | |
|---|---|
| CALL# | Call number in the call log. |
| NEW | New (unreviewed) call. |
| REP | Repeat call from the same number. |
|  | <ul style="list-style-type: none">The telephone line cord is not plugged into a wall jack.The telephone or another telephone on the same line is in use. |
|  | The battery power is low. |

Screen display messages

| | |
|------------------------|---|
| REMOVE ALL? | Remove all call log entries. |
| END OF LIST | You have reached the end of the call log entries. |
| Pro | Program a one-touch or two-touch memory. |
| LIFT RECEIVER | A caller ID entry is ready to be dialed by lifting the handset. |
| TOTAL XX NEW XX | The total and new (unreviewed) calls in the call log. |


Battery installation

Before using the telephone, you should install four good AA alkaline batteries (not included) to provide memory backup and enable the use of some features. The four AA batteries are required for caller ID features and the **IN USE** light to work. If good batteries are not installed, the display only works when you lift the handset.


If you unplug the telephone from the wall jack, or you lose telephone service for over 10 minutes, and good batteries are not installed, the following information is lost: call list, numbers stored in one- and two-touch memory, redial list, and all settings in the feature menu. It is recommended that you initially install new batteries and change the batteries soon after the low battery icon appears.

1. Press on the tab to open the cover of the battery compartment.
2. Install four new AA batteries (not included) in the battery compartment according to the label + and - engraved in the compartment.
3. Close the battery compartment cover. Make sure it clicks into place.

Step 1

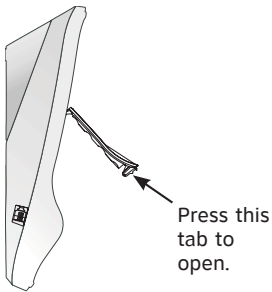

Step 2

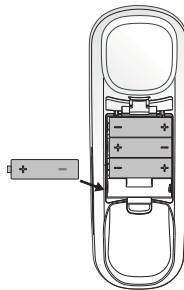

Step 3




NOTES:

- Do not mix old and new batteries and do not mix alkaline and standard (carbon-zinc) batteries.
- When the batteries are installed, the screen will show 12:00 and the clock will begin to run. It will reset to the correct time when the first caller ID data is received.
- Always disconnect all telephone lines from the wall outlets before replacing batteries.
- Install new batteries every six months to maintain the call log and telephone memory.

Telephone installation

If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone lines, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters. Install the telephone as shown below.

1. Plug one end of the coiled handset cord into the handset jack on the left side of the telephone base. Plug the other end into the handset.
2. One end of the telephone line cord has been plugged into the telephone jack on the bottom of the telephone base. Double check that it is plugged in firmly.
3. Thread the cord through the channel and out of the mounting area as shown.
4. Plug the other end of the telephone line cord into a telephone wall jack.
5. Put the handset on the telephone base.

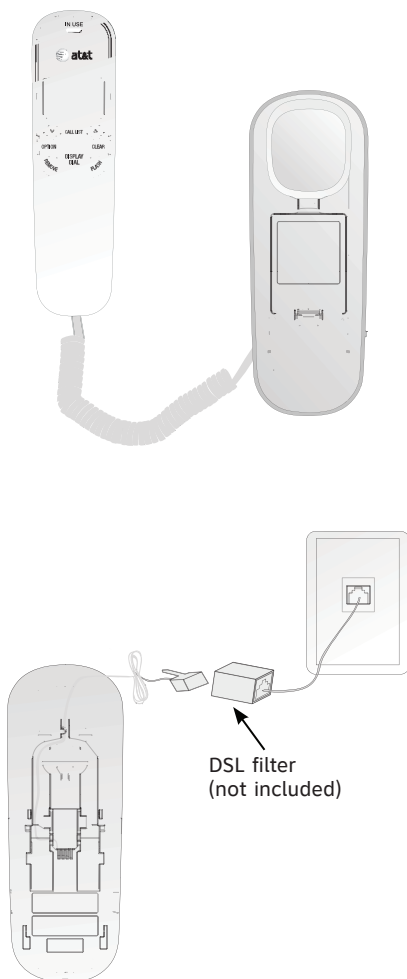


Installation options

Your telephone base is ready for tabletop use. If you want to mount your telephone on a wall, use the provided wall mount bracket to connect with a standard dual-stud telephone wall mounting plate. If you do not have this mounting plate, you can purchase one from many hardware or consumer electronic retailers. You might need a professional to install the mounting plate.


Wall installation

To install the telephone base in the wall mount position, make sure that you first unplug all cords connected to the telephone base.



1. Lift the handset and place it aside. On the telephone base, pull out the handset tab and rotate it 180 degrees. Replace the handset tab back to the grooves until it clicks into position.

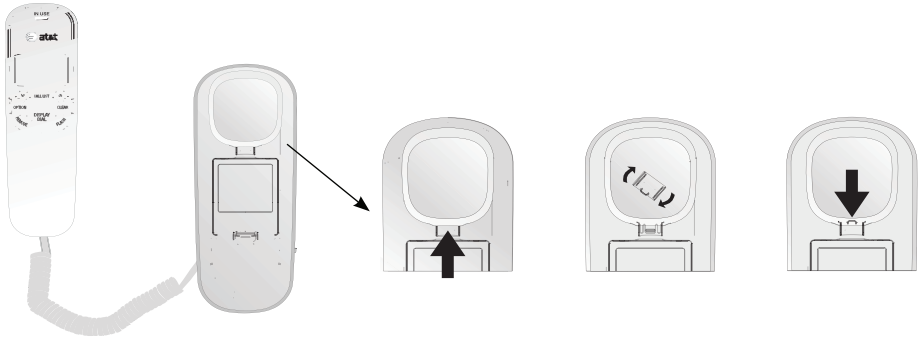

2. Remove the bracket from the base, hold the telephone base with both hands, slide the bracket upwards as the arrows indicate.


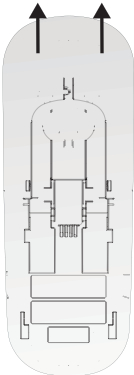


3. Rotate the bracket to the wall installation position, push the bracket upwards as shown below until it clicks into place.

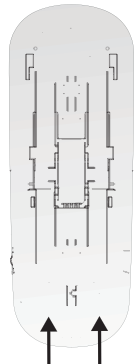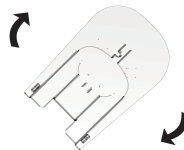

Installation options


4. Route the telephone line cord through the slot as shown below and plug the other end of the telephone line cord into a telephone wall jack. To mount the telephone on the wall, position the mounting holes A and B over the telephone outlet mounting studs. Slide the bracket down firmly so the telephone is held securely on the telephone outlet mounting studs.
5. Place the handset back on the telephone base.

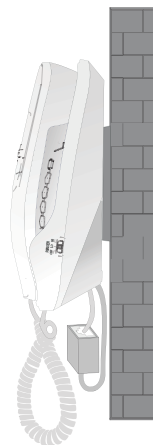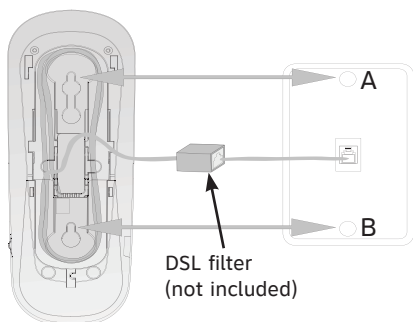

Tabletop installation




To return the bracket from the wall installation to tabletop use, follow the instructions below.

1. Remove the telephone base from the wall mounting plate. Unplug the telephone line cord from the telephone wall jack and remove the cord from the slots under the telephone base.
2. Lift the handset and place it aside. On the telephone base, pull out the handset tab and rotate it 180 degrees. Replace the handset tab back to the grooves until it clicks into position.

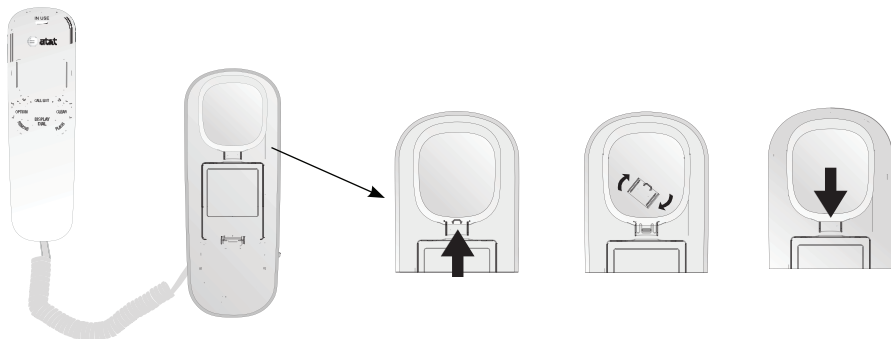


Installation options


3. Remove the bracket from the base, hold the telephone base firmly, slide the bracket downwards as the arrows indicate.
4. Rotate the bracket to the tabletop installation position, push the bracket down as shown below until it clicks into place.

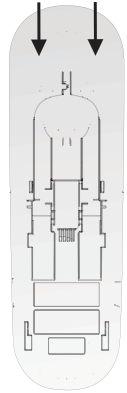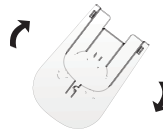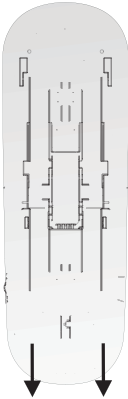

5. Route the telephone line cord through the slot as shown below. Plug the other end of the telephone line cord into the telephone wall jack.

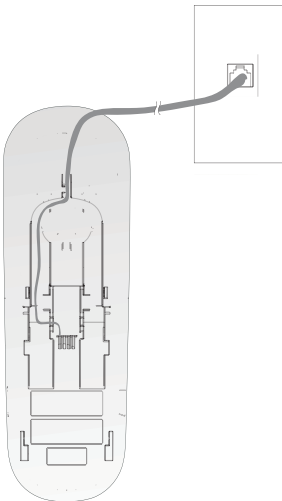

6. Place the handset back on the telephone base.

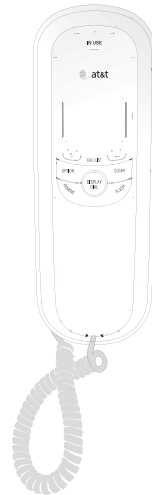



www.telephones.att.com

© 2009 Advanced American Telephones. All rights reserved.

AT&T and the AT&T logo are trademarks of AT&T Intellectual Property II, L.P. d/b/a
AT&T Intellectual Property licensed to Advanced American Telephones, San Antonio, TX 78219.

Trimline® is a registered trademark of Advanced American Telephones.

Printed in China. Issue 4 AT&T 3/09